

Determining Your Maintenance Interval: Months vs. Mileage

Lexus recommends obtaining scheduled maintenance for your vehicle every six months or 5,000 miles, whichever occurs first.

For example:

- If at six months you have driven less than 5,000 miles, you should obtain maintenance at **six months**; don't wait until 5,000 miles.
- If you drive 5,000 miles in less than six months, you should obtain maintenance at **5,000 miles**; don't wait until six months.

Be sure to keep an eye on your mileage so that you obtain maintenance when recommended. If you are a low-mileage driver, mark your calendar to remind yourself to obtain maintenance every six months.

Special Operating Conditions

In addition to standard maintenance items, vehicles that are driven under special operating conditions require further maintenance service. These special operating conditions, which put added demands on a vehicle, include:

- Driving on dirt roads or on dusty roads
- Repeated trips of less than five miles in temperatures below 32° F or 0° C
- Extensive idling and/or low-speed driving for long distances, such as police, taxi or door-to-door delivery use

If you drive primarily under any of the conditions noted, you should replace the engine oil and oil filter every six months or 5,000 miles – even when the oil maintenance reminder does not appear. Some of these special operating conditions require other maintenance items; these items are indicated in each maintenance chart.

If you drive only occasionally under any of the special operating conditions noted, it is not necessary to change the oil every six months or 5,000 miles or to perform the additional services listed in the charts. This added maintenance is required only if you drive primarily under any of the special operating conditions.

Complimentary First Scheduled Maintenance Service: Six Months or 5,000 Miles

Lexus provides your first scheduled maintenance service at no charge. The service is performed at six months or 5,000 miles, whichever occur first, and includes these items:

- Check for available software updates (OTAs) and update upon customer authorization
- Inspect and adjust all fluid levels
- Program Lexus Personalized Settings, if requested
- Reset scheduled maintenance reminder
- Rotate tires
- Inspect brake pads and discs
- Inspect wiper blades
- Add fuel injector cleaner to fuel tank (Hawaii only)
- Check installation of driver's floor mat
- Road test vehicle

What are Lexus Personalized Settings?

Your vehicle includes a variety of electronic features that can be programmed to your preferences. For example, doors can be programmed to remain locked when you shift into "Park." (For more information, see the "Customizable Features" section of the Specifications chapter in your *Owner's Manual*.) Programming of these features is performed once at no charge, provided you obtain the service at the six-month/5,000-mile scheduled maintenance service. Programming of some Lexus Personalized Settings requires special equipment and may be performed only by an authorized Lexus dealership.

Complimentary Second Scheduled Maintenance Service: 12 Months or 10,000 Miles

Lexus provides your first scheduled maintenance service at no charge.

The service is performed at 12 months or 10,000 miles, whichever occurs first. To obtain this service, contact your Lexus dealership. Your complimentary service will include these items:

- Check for available software updates (OTAs) and update upon customer authorization
- Replace engine oil and oil filter. Reference *Owner's Manual* for recommended oil grade and viscosity.*
- Reset scheduled maintenance reminder
- Rotate tires
- Inspect brake pads and discs
- Inspect wiper blades
- Add fuel injector cleaner to fuel tank (Hawaii only)
- Check installation of driver's floor mat
- Road test vehicle

If you do the majority of your driving under certain special operating conditions, additional items are included in this service. See the "12 Months or 10,000 Miles" chart on page 48.

*Replace the engine oil and oil filter every 12 months or 10,000 miles, or when the oil maintenance reminder appears, whichever comes first.

SCHEDULED MAINTENANCE LOG

NOTES

This image shows a single sheet of white paper with horizontal ruling lines. The lines are evenly spaced and run across the width of the page. There are no margins, text, or other markings on the paper.

MAINTENANCE

SCHEDULED MAINTENANCE LOG

MAINTENANCE

6 Months or 5,000 Miles¹

- ☐ Check for available software updates (OTAs) and update upon customer authorization
- ☐ Inspect and adjust all fluid levels
- ☐ Program Lexus Personalized Settings, if requested
- ☐ Reset scheduled maintenance reminder
- ☐ Rotate tires
- ☐ Inspect brake pads and discs
- ☐ Inspect wiper blades
- ☐ Add fuel injector cleaner to fuel tank (Hawaii only)
- ☐ Check installation of driver's floor mat
- ☐ Road test vehicle

Note: If you drive primarily under certain special operating conditions, you should also replace the engine oil and replace the oil filter. See page 44 for conditions that apply. Some conditions require additional maintenance. See below.

If you drive primarily under any of these special operating conditions, perform these additional items:

Driving off-road, on dirt roads or on dusty roads:

- ☐ Inspect ball joints and dust covers
- ☐ Inspect drive shaft boots
- ☐ Inspect engine air filter
- ☐ Inspect propeller shaft boots
- ☐ Inspect rack-and-pinion assembly
- ☐ Lubricate propeller shaft (within 24 hours of submerging), re-torque nuts and bolts
- ☐ Tighten nuts and bolts on chassis

Towing a trailer, using a car-top carrier or heavy vehicle loading:

- ☐ Lubricate propeller shaft (within 24 hours of submerging), re-torque nuts and bolts
- ☐ Tighten propeller shaft
- ☐ Tighten nuts and bolts on chassis

Driving on roads on which road salt has been applied:

- ☐ Lubricate propeller shaft (within 24 hours of submerging), re-torque nuts and bolts

Date: _____ Mileage: _____

12 Months or 10,000 Miles

- ☐ Check for available software updates (OTAs) and update upon customer authorization
- ☐ Replace engine oil and oil filter. Reference Owners Manual for recommended oil grade and viscosity²
- ☐ Reset oil maintenance reminder if oil was changed
- ☐ Reset scheduled maintenance reminder
- ☐ Rotate tires
- ☐ Inspect brake pads and discs
- ☐ Inspect wiper blades
- ☐ Add fuel injector cleaner to fuel tank (Hawaii only)
- ☐ Check installation of driver's floor mat
- ☐ Road test vehicle

If you drive primarily under any of these special operating conditions, perform these additional items:

Driving off-road, on dirt roads or on dusty roads:

- ☐ Inspect ball joints and dust covers
- ☐ Inspect drive shaft boots
- ☐ Inspect engine air filter
- ☐ Inspect propeller shaft boots
- ☐ Inspect rack-and-pinion assembly
- ☐ Lubricate propeller shaft (within 24 hours of submerging), re-torque nuts and bolts
- ☐ Tighten nuts and bolts on chassis

Towing a trailer, using a car-top carrier or heavy vehicle loading:

- ☐ Lubricate propeller shaft (within 24 hours of submerging), re-torque nuts and bolts
- ☐ Tighten propeller shaft
- ☐ Tighten nuts and bolts on chassis

Driving on roads on which road salt has been applied:

- ☐ Lubricate propeller shaft (within 24 hours of submerging), re-torque nuts and bolts

Date: _____ Mileage: _____

¹This service, excluding maintenance required for special operating conditions, is complimentary when performed by an authorized Lexus dealership.

²Replace the engine oil and oil filter every 12 months or 10,000 miles, or when the oil maintenance reminder appears, whichever comes first.

18 Months or 15,000 Miles

- ☐ Check for available software updates (OTAs) and update upon customer authorization
- ☐ Inspect and adjust all fluid levels
- ☐ Lubricate propeller shaft (within 24 hours of submerging), re-torque nuts and bolts
- ☐ Replace Smart Key battery
- ☐ Reset scheduled maintenance reminder
- ☐ Rotate tires
- ☐ Tighten propeller shaft
- ☐ Inspect brake pads and discs
- ☐ Add fuel injector cleaner to fuel tank (Hawaii only)
- ☐ Check installation of driver's floor mat
- ☐ Road test vehicle
- ☐ Inspect the following:

__ Ball joints and dust covers	__ Exhaust pipes and mountings
__ Body	__ Front differential oil
__ Brake lines and hoses	__ Propeller shaft boots
__ Drive shaft boots	__ Rack-and-pinion assembly
__ Engine coolant/intercooler coolant (see page 70)	__ Rear differential oil
	__ Wiper blades

Note: If recommended oil WAS NOT used at the last oil change, replace engine oil and oil filter. See page 44 for conditions that apply. Some conditions require additional maintenance. See below.

If you drive primarily under any of these special operating conditions, perform these additional items:

Driving off-road, on dirt roads or on dusty roads:

- ☐ Inspect engine air filter
- ☐ Tighten nuts and bolts on chassis

Towing a trailer, using a car-top carrier or heavy vehicle loading:

- ☐ Replace front differential oil
- ☐ Replace rear differential oil
- ☐ Tighten nuts and bolts on chassis

Date: _____ Mileage: _____

SCHEDULED MAINTENANCE LOG

MAINTENANCE

24 Months or 20,000 Miles

- ☐ Check for available software updates (OTAs) and update upon customer authorization
- ☐ Replace engine oil and oil filter. Reference Owners Manual for recommended oil grade and viscosity¹
- ☐ Reset oil maintenance reminder if oil was changed
- ☐ Reset scheduled maintenance reminder
- ☐ Rotate tires
- ☐ Inspect brake pads and discs
- ☐ Inspect wiper blades
- ☐ Add fuel injector cleaner to fuel tank (Hawaii only)
- ☐ Check installation of driver's floor mat
- ☐ Road test vehicle

If you drive primarily under any of these special operating conditions, perform these additional items:

Driving off-road, on dirt roads or on dusty roads:

- ☐ Inspect ball joints and dust covers
- ☐ Inspect drive shaft boots
- ☐ Inspect engine air filter
- ☐ Inspect propeller shaft boots
- ☐ Inspect rack-and-pinion assembly
- ☐ Lubricate propeller shaft (within 24 hours of submerging), re-torque nuts and bolts
- ☐ Tighten nuts and bolts on chassis

Towing a trailer, using a car-top carrier or heavy vehicle loading:

- ☐ Lubricate propeller shaft (within 24 hours of submerging), re-torque nuts and bolts
- ☐ Tighten propeller shaft
- ☐ Tighten nuts and bolts on chassis

Driving on roads on which road salt has been applied:

- ☐ Lubricate propeller shaft (within 24 hours of submerging), re-torque nuts and bolts

Date: _____ Mileage: _____

30 Months or 25,000 Miles

- ☐ Check for available software updates (OTAs) and update upon customer authorization
- ☐ Inspect and adjust all fluid levels
- ☐ Reset scheduled maintenance reminder
- ☐ Rotate tires
- ☐ Inspect brake pads and discs
- ☐ Inspect wiper blades
- ☐ Add fuel injector cleaner to fuel tank (Hawaii only)
- ☐ Check installation of driver's floor mat
- ☐ Road test vehicle

Note: If recommended oil WAS NOT used at the last oil change, replace engine oil and oil filter. See page 44 for conditions that apply. Some conditions require additional maintenance. See below.

If you drive primarily under any of these special operating conditions, perform these additional items:

Driving off-road, on dirt roads or on dusty roads:

- ☐ Inspect ball joints and dust covers
- ☐ Inspect drive shaft boots
- ☐ Inspect engine air filter
- ☐ Inspect propeller shaft boots
- ☐ Inspect rack-and-pinion assembly
- ☐ Lubricate propeller shaft (within 24 hours of submerging), re-torque nuts and bolts
- ☐ Tighten nuts and bolts on chassis

Towing a trailer, using a car-top carrier or heavy vehicle loading:

- ☐ Lubricate propeller shaft (within 24 hours of submerging), re-torque nuts and bolts
- ☐ Tighten propeller shaft
- ☐ Tighten nuts and bolts on chassis

Driving on roads on which road salt has been applied:

- ☐ Lubricate propeller shaft (within 24 hours of submerging), re-torque nuts and bolts

Date: _____ Mileage: _____

¹Replace the engine oil and oil filter every 12 months or 10,000 miles, or when the oil maintenance reminder appears, whichever comes first.

SCHEDULED MAINTENANCE LOG

36 Months or 30,000 Miles

- | | |
|---|--|
| <ul style="list-style-type: none"> <input type="checkbox"/> Check for available software updates (OTAs) and update upon customer authorization <input type="checkbox"/> Replace engine oil and oil filter. Reference Owners Manual for recommended oil grade and viscosity¹ <input type="checkbox"/> Reset oil maintenance reminder if oil was changed <input type="checkbox"/> Reset scheduled maintenance reminder <input type="checkbox"/> Lubricate propeller shaft (within 24 hours of submerging), re-torque nuts and bolts <input type="checkbox"/> Replace cabin air filter <input type="checkbox"/> Inspect the following: <ul style="list-style-type: none"> ___ Ball joints and dust covers ___ Body ___ Brake lines and hoses ___ Brake rotor thickness and runout ___ Drive shaft boots ___ Engine coolant/intercooler coolant (see page 70) ___ Exhaust pipes and mountings ___ Front differential oil ___ Fuel lines and connections, fuel tank band and fuel tank vapor vent system hoses | <ul style="list-style-type: none"> <input type="checkbox"/> Replace brake fluid <input type="checkbox"/> Replace engine air filter <input type="checkbox"/> Replace Smart Key battery <input type="checkbox"/> Rotate tires <input type="checkbox"/> Tighten propeller shaft <input type="checkbox"/> Inspect brake pads and discs <input type="checkbox"/> Add fuel injector cleaner to fuel tank (Hawaii only) <input type="checkbox"/> Check installation of driver's floor mat <input type="checkbox"/> Road test vehicle |
|---|--|

If you drive primarily under any of these special operating conditions, perform these additional items:

Driving off-road, on dirt roads or on dusty roads:

- ☐ Replace transfer case oil
- ☐ Tighten nuts and bolts on chassis

Towing a trailer, using a car-top carrier or heavy vehicle loading:

- ☐ Replace front differential oil
- ☐ Replace rear differential oil
- ☐ Replace transfer case oil
- ☐ Tighten nuts and bolts on chassis

Date: _____ Mileage: _____

MAINTENANCE

¹Replace the engine oil and oil filter every 12 months or 10,000 miles, or when the oil maintenance reminder appears, whichever comes first.

SCHEDULED MAINTENANCE LOG

MAINTENANCE

42 Months or 35,000 Miles

- ☐ Check for available software updates (OTAs) and update upon customer authorization
- ☐ Inspect and adjust all fluid levels
- ☐ Reset scheduled maintenance reminder
- ☐ Rotate tires
- ☐ Inspect brake pads and discs
- ☐ Inspect wiper blades
- ☐ Add fuel injector cleaner to fuel tank (Hawaii only)
- ☐ Check installation of driver's floor mat
- ☐ Road test vehicle

Note: If recommended oil WAS NOT used at the last oil change, replace engine oil and oil filter. See page 44 for conditions that apply. Some conditions require additional maintenance. See below.

If you drive primarily under any of these special operating conditions, perform these additional items:

Driving off-road, on dirt roads or on dusty roads:

- ☐ Inspect ball joints and dust covers
- ☐ Inspect drive shaft boots
- ☐ Inspect engine air filter
- ☐ Inspect propeller shaft boots
- ☐ Inspect rack-and-pinion assembly
- ☐ Lubricate propeller shaft (within 24 hours of submerging), re-torque nuts and bolts
- ☐ Tighten nuts and bolts on chassis

Towing a trailer, using a car-top carrier or heavy vehicle loading:

- ☐ Lubricate propeller shaft (within 24 hours of submerging), re-torque nuts and bolts
- ☐ Tighten propeller shaft
- ☐ Tighten nuts and bolts on chassis

Driving on roads on which road salt has been applied:

- ☐ Lubricate propeller shaft (within 24 hours of submerging), re-torque nuts and bolts

Date: _____ Mileage: _____

48 Months or 40,000 Miles

- ☐ Check for available software updates (OTAs) and update upon customer authorization
- ☐ Replace engine oil and oil filter. Reference Owners Manual for recommended oil grade and viscosity¹
- ☐ Reset oil maintenance reminder if oil was changed
- ☐ Replace spark plugs²
- ☐ Reset scheduled maintenance reminder
- ☐ Rotate tires
- ☐ Inspect brake pads and discs
- ☐ Inspect wiper blades
- ☐ Add fuel injector cleaner to fuel tank (Hawaii only)
- ☐ Check installation of driver's floor mat
- ☐ Road test vehicle

If you drive primarily under any of these special operating conditions, perform these additional items:

Driving off-road, on dirt roads or on dusty roads:

- ☐ Inspect ball joints and dust covers
- ☐ Inspect drive shaft boots
- ☐ Inspect engine air filter
- ☐ Inspect propeller shaft boots
- ☐ Inspect rack-and-pinion assembly
- ☐ Lubricate propeller shaft (within 24 hours of submerging), re-torque nuts and bolts
- ☐ Tighten nuts and bolts on chassis

Towing a trailer, using a car-top carrier or heavy vehicle loading:

- ☐ Lubricate propeller shaft (within 24 hours of submerging), re-torque nuts and bolts
- ☐ Tighten propeller shaft
- ☐ Tighten nuts and bolts on chassis

Driving on roads on which road salt has been applied:

- ☐ Lubricate propeller shaft (within 24 hours of submerging), re-torque nuts and bolts

Date: _____ Mileage: _____

¹Replace the engine oil and oil filter every 12 months or 10,000 miles, or when the oil maintenance reminder appears, whichever comes first.

²Required under the terms of the Emission Control Warranty.

54 Months or 45,000 Miles

- ☐ Check for available software updates (OTAs) and update upon customer authorization
- ☐ Inspect and adjust all fluid levels
- ☐ Lubricate propeller shaft (within 24 hours of submerging), re-torque nuts and bolts
- ☐ Replace Smart Key battery
- ☐ Reset scheduled maintenance reminder
- ☐ Rotate tires
- ☐ Tighten propeller shaft
- ☐ Inspect brake pads and discs
- ☐ Add fuel injector cleaner to fuel tank (Hawaii only)
- ☐ Check installation of driver's floor mat
- ☐ Road test vehicle
- ☐ Inspect the following:

<input type="checkbox"/> Ball joints and dust covers	<input type="checkbox"/> Exhaust pipes and mountings
<input type="checkbox"/> Body	<input type="checkbox"/> Front differential oil
<input type="checkbox"/> Brake lines and hoses	<input type="checkbox"/> Propeller shaft boots
<input type="checkbox"/> Drive shaft boots	<input type="checkbox"/> Rack-and-pinion assembly
<input type="checkbox"/> Engine coolant/intercooler coolant (see page 70)	<input type="checkbox"/> Rear differential oil
	<input type="checkbox"/> Wiper blades

Note: If recommended oil WAS NOT used at the last oil change, replace engine oil and oil filter. See page 44 for conditions that apply. Some conditions require additional maintenance. See below.

If you drive primarily under any of these special operating conditions, perform these additional items:

Driving off-road, on dirt roads or on dusty roads:

- ☐ Inspect engine air filter
- ☐ Tighten nuts and bolts on chassis

Towing a trailer, using a car-top carrier or heavy vehicle loading:

- ☐ Replace front differential oil
- ☐ Replace rear differential oil
- ☐ Tighten nuts and bolts on chassis

Date: _____ Mileage: _____

SCHEDULED MAINTENANCE LOG

MAINTENANCE

60 Months or 50,000 Miles

- ☐ Check for available software updates (OTAs) and update upon customer authorization
- ☐ Replace engine oil and oil filter. Reference Owners Manual for recommended oil grade and viscosity¹
- ☐ Reset oil maintenance reminder if oil was changed
- ☐ Reset scheduled maintenance reminder
- ☐ Rotate tires
- ☐ Inspect brake pads and discs
- ☐ Inspect wiper blades
- ☐ Add fuel injector cleaner to fuel tank (Hawaii only)
- ☐ Check installation of driver's floor mat
- ☐ Road test vehicle

If you drive primarily under any of these special operating conditions, perform these additional items:

Driving off-road, on dirt roads or on dusty roads:

- ☐ Inspect ball joints and dust covers
- ☐ Inspect drive shaft boots
- ☐ Inspect engine air filter
- ☐ Inspect propeller shaft boots
- ☐ Inspect rack-and-pinion assembly
- ☐ Lubricate propeller shaft (within 24 hours of submerging), re-torque nuts and bolts
- ☐ Tighten nuts and bolts on chassis

Towing a trailer, using a car-top carrier or heavy vehicle loading:

- ☐ Lubricate propeller shaft (within 24 hours of submerging), re-torque nuts and bolts
- ☐ Tighten propeller shaft
- ☐ Tighten nuts and bolts on chassis

Driving on roads on which road salt has been applied:

- ☐ Lubricate propeller shaft (within 24 hours of submerging), re-torque nuts and bolts

Date: _____ Mileage: _____

5.5 Years or 55,000 Miles

- ☐ Check for available software updates (OTAs) and update upon customer authorization
- ☐ Inspect and adjust all fluid levels
- ☐ Reset scheduled maintenance reminder
- ☐ Rotate tires
- ☐ Inspect brake pads and discs
- ☐ Inspect wiper blades
- ☐ Add fuel injector cleaner to fuel tank (Hawaii only)
- ☐ Check installation of driver's floor mat
- ☐ Road test vehicle

Note: If recommended oil WAS NOT used at the last oil change, replace engine oil and oil filter. See page 44 for conditions that apply. Some conditions require additional maintenance. See below.

If you drive primarily under any of these special operating conditions, perform these additional items:

Driving off-road, on dirt roads or on dusty roads:

- ☐ Inspect ball joints and dust covers
- ☐ Inspect drive shaft boots
- ☐ Inspect engine air filter
- ☐ Inspect propeller shaft boots
- ☐ Inspect rack-and-pinion assembly
- ☐ Lubricate propeller shaft (within 24 hours of submerging), re-torque nuts and bolts
- ☐ Tighten nuts and bolts on chassis

Towing a trailer, using a car-top carrier or heavy vehicle loading:

- ☐ Lubricate propeller shaft (within 24 hours of submerging), re-torque nuts and bolts
- ☐ Tighten propeller shaft
- ☐ Tighten nuts and bolts on chassis

Driving on roads on which road salt has been applied:

- ☐ Lubricate propeller shaft (within 24 hours of submerging), re-torque nuts and bolts

Date: _____ Mileage: _____

¹Replace the engine oil and oil filter every 12 months or 10,000 miles, or when the oil maintenance reminder appears, whichever comes first.

SCHEDULED MAINTENANCE LOG

6 Years or 60,000 Miles

- | | |
|--|--|
| <ul style="list-style-type: none"> <input type="checkbox"/> Check for available software updates (OTAs) and update upon customer authorization <input type="checkbox"/> Replace engine oil and oil filter. Reference Owners Manual for recommended oil grade and viscosity¹ <input type="checkbox"/> Lubricate propeller shaft (within 24 hours of submerging), re-torque nuts and bolts <input type="checkbox"/> Replace cabin air filter <input type="checkbox"/> Replace brake fluid <input type="checkbox"/> Replace engine air filter <input type="checkbox"/> Replace Smart Key battery <input type="checkbox"/> Inspect the following: <ul style="list-style-type: none"> ___ Ball joints and dust covers ___ Body ___ Brake lines and hoses ___ Brake rotor thickness and runout ___ Drive belt ___ Drive shaft boots ___ Engine coolant/intercooler coolant (see page 70) ___ Exhaust pipes and mountings ___ Front differential oil ___ Fuel lines and connections, fuel tank band and fuel tank vapor vent system hoses | <ul style="list-style-type: none"> <input type="checkbox"/> Reset oil maintenance reminder if oil was changed <input type="checkbox"/> Reset scheduled maintenance reminder <input type="checkbox"/> Rotate tires <input type="checkbox"/> Tighten propeller shaft <input type="checkbox"/> Inspect brake pads and discs <input type="checkbox"/> Add fuel injector cleaner to fuel tank (Hawaii only) <input type="checkbox"/> Check installation of driver's floor mat <input type="checkbox"/> Road test vehicle ___ Fuel tank cap gasket ___ Propeller shaft boots ___ Rack-and-pinion assembly ___ Rear differential oil ___ Transfer case oil level ___ Transmission fluid cooler hoses and connections ___ Transmission for signs of leakage ___ Wiper blades |
|--|--|

If you drive primarily under any of these special operating conditions, perform these additional items:

Driving off-road, on dirt roads or on dusty roads:

- ☐ Replace transfer case oil
- ☐ Tighten nuts and bolts on chassis

Towing a trailer, using a car top carrier, heavy vehicle loading or extensive idling and/or low speed driving

- ☐ Replace front differential oil
- ☐ Replace rear differential oil
- ☐ Replace transfer case oil
- ☐ Replace transmission fluid
- ☐ Tighten nuts and bolts on chassis

Date: _____ Mileage: _____

MAINTENANCE

¹Replace the engine oil and oil filter every 12 months or 10,000 miles, or when the oil maintenance reminder appears, whichever comes first.

SCHEDULED MAINTENANCE LOG

MAINTENANCE

6.5 Years or 65,000 Miles

- ☐ Check for available software updates (OTAs) and update upon customer authorization
- ☐ Inspect and adjust all fluid levels
- ☐ Reset scheduled maintenance reminder
- ☐ Rotate tires
- ☐ Inspect brake pads and discs
- ☐ Inspect wiper blades
- ☐ Add fuel injector cleaner to fuel tank (Hawaii only)
- ☐ Check installation of driver's floor mat
- ☐ Road test vehicle

Note: If recommended oil WAS NOT used at the last oil change, replace engine oil and oil filter. See page 44 for conditions that apply. Some conditions require additional maintenance. See below.

If you drive primarily under any of these special operating conditions, perform these additional items:

Driving off-road, on dirt roads or on dusty roads:

- ☐ Inspect ball joints and dust covers
- ☐ Inspect drive shaft boots
- ☐ Inspect engine air filter
- ☐ Inspect propeller shaft boots
- ☐ Inspect rack-and-pinion assembly
- ☐ Lubricate propeller shaft (within 24 hours of submerging), re-torque nuts and bolts
- ☐ Tighten nuts and bolts on chassis

Towing a trailer, using a car-top carrier or heavy vehicle loading:

- ☐ Lubricate propeller shaft (within 24 hours of submerging), re-torque nuts and bolts
- ☐ Tighten propeller shaft
- ☐ Tighten nuts and bolts on chassis

Driving on roads on which road salt has been applied:

- ☐ Lubricate propeller shaft (within 24 hours of submerging), re-torque nuts and bolts

Date: _____ Mileage: _____

7 Years or 70,000 Miles

- ☐ Check for available software updates (OTAs) and update upon customer authorization
- ☐ Replace engine oil and oil filter. Reference Owners Manual for recommended oil grade and viscosity¹
- ☐ Reset oil maintenance reminder if oil was changed
- ☐ Reset scheduled maintenance reminder
- ☐ Rotate tires
- ☐ Inspect brake pads and discs
- ☐ Inspect wiper blades
- ☐ Add fuel injector cleaner to fuel tank (Hawaii only)
- ☐ Check installation of driver's floor mat
- ☐ Road test vehicle

If you drive primarily under any of these special operating conditions, perform these additional items:

Driving off-road, on dirt roads or on dusty roads:

- ☐ Inspect ball joints and dust covers
- ☐ Inspect drive shaft boots
- ☐ Inspect engine air filter
- ☐ Inspect propeller shaft boots
- ☐ Inspect rack-and-pinion assembly
- ☐ Lubricate propeller shaft (within 24 hours of submerging), re-torque nuts and bolts
- ☐ Tighten nuts and bolts on chassis

Towing a trailer, using a car-top carrier or heavy vehicle loading:

- ☐ Lubricate propeller shaft (within 24 hours of submerging), re-torque nuts and bolts
- ☐ Tighten propeller shaft
- ☐ Tighten nuts and bolts on chassis

Driving on roads on which road salt has been applied:

- ☐ Lubricate propeller shaft (within 24 hours of submerging), re-torque nuts and bolts

Date: _____ Mileage: _____

¹Replace the engine oil and oil filter every 12 months or 10,000 miles, or when the oil maintenance reminder appears, whichever comes first.

7.5 Years or 75,000 Miles

- ☐ Check for available software updates (OTAs) and update upon customer authorization
- ☐ Inspect and adjust all fluid levels
- ☐ Lubricate propeller shaft (within 24 hours of submerging), re-torque nuts and bolts
- ☐ Replace Smart Key battery
- ☐ Reset scheduled maintenance reminder
- ☐ Rotate tires
- ☐ Tighten propeller shaft
- ☐ Inspect brake pads and discs
- ☐ Add fuel injector cleaner to fuel tank (Hawaii only)
- ☐ Check installation of driver's floor mat
- ☐ Road test vehicle
- ☐ Inspect the following:

<input type="checkbox"/> Ball joints and dust covers	<input type="checkbox"/> Exhaust pipes and mountings
<input type="checkbox"/> Body	<input type="checkbox"/> Front differential oil
<input type="checkbox"/> Brake lines and hoses	<input type="checkbox"/> Propeller shaft boots
<input type="checkbox"/> Drive belt	<input type="checkbox"/> Rack-and-pinion assembly
<input type="checkbox"/> Drive shaft boots	<input type="checkbox"/> Rear differential oil
<input type="checkbox"/> Engine coolant/intercooler coolant (see page 70)	<input type="checkbox"/> Wiper blades

Note: If recommended oil WAS NOT used at the last oil change, replace engine oil and oil filter. See page 44 for conditions that apply. Some conditions require additional maintenance. See below.

If you drive primarily under any of these special operating conditions, perform these additional items:

Driving off-road, on dirt roads or on dusty roads:

- ☐ Inspect engine air filter
- ☐ Tighten nuts and bolts on chassis

Towing a trailer, using a car-top carrier or heavy vehicle loading:

- ☐ Replace front differential oil
- ☐ Replace rear differential oil
- ☐ Tighten nuts and bolts on chassis

Date: _____ Mileage: _____

SCHEDULED MAINTENANCE LOG

MAINTENANCE

8 Years or 80,000 Miles

- ☐ Check for available software updates (OTAs) and update upon customer authorization
- ☐ Replace engine oil and oil filter. Reference Owners Manual for recommended oil grade and viscosity¹
- ☐ Reset oil maintenance reminder if oil was changed
- ☐ Replace spark plugs²
- ☐ Reset scheduled maintenance reminder
- ☐ Rotate tires
- ☐ Inspect brake pads and discs
- ☐ Inspect wiper blades
- ☐ Add fuel injector cleaner to fuel tank (Hawaii only)
- ☐ Check installation of driver's floor mat
- ☐ Road test vehicle

If you drive primarily under any of these special operating conditions, perform these additional items:

Driving off-road, on dirt roads or on dusty roads:

- ☐ Inspect ball joints and dust covers
- ☐ Inspect drive shaft boots
- ☐ Inspect engine air filter
- ☐ Inspect propeller shaft boots
- ☐ Inspect rack-and-pinion assembly
- ☐ Lubricate propeller shaft (within 24 hours of submerging), re-torque nuts and bolts
- ☐ Tighten nuts and bolts on chassis

Towing a trailer, using a car-top carrier or heavy vehicle loading:

- ☐ Lubricate propeller shaft (within 24 hours of submerging), re-torque nuts and bolts
- ☐ Tighten propeller shaft
- ☐ Tighten nuts and bolts on chassis

Driving on roads on which road salt has been applied:

- ☐ Lubricate propeller shaft (within 24 hours of submerging), re-torque nuts and bolts

Date: _____ Mileage: _____

8.5 Years or 85,000 Miles

- ☐ Check for available software updates (OTAs) and update upon customer authorization
- ☐ Inspect and adjust all fluid levels
- ☐ Reset scheduled maintenance reminder
- ☐ Rotate tires
- ☐ Inspect brake pads and discs
- ☐ Inspect wiper blades
- ☐ Add fuel injector cleaner to fuel tank (Hawaii only)
- ☐ Check installation of driver's floor mat
- ☐ Road test vehicle

Note: If recommended oil WAS NOT used at the last oil change, replace engine oil and oil filter. See page 44 for conditions that apply. Some conditions require additional maintenance. See below.

If you drive primarily under any of these special operating conditions, perform these additional items:

Driving off-road, on dirt roads or on dusty roads:

- ☐ Inspect ball joints and dust covers
- ☐ Inspect drive shaft boots
- ☐ Inspect engine air filter
- ☐ Inspect propeller shaft boots
- ☐ Inspect rack-and-pinion assembly
- ☐ Lubricate propeller shaft (within 24 hours of submerging), re-torque nuts and bolts
- ☐ Tighten nuts and bolts on chassis

Towing a trailer, using a car-top carrier or heavy vehicle loading:

- ☐ Lubricate propeller shaft (within 24 hours of submerging), re-torque nuts and bolts
- ☐ Tighten propeller shaft
- ☐ Tighten nuts and bolts on chassis

Driving on roads on which road salt has been applied:

- ☐ Lubricate propeller shaft (within 24 hours of submerging), re-torque nuts and bolts

Date: _____ Mileage: _____

¹Replace the engine oil and oil filter every 12 months or 10,000 miles, or when the oil maintenance reminder appears, whichever comes first.

²Required under the terms of the Emission Control Warranty.

SCHEDULED MAINTENANCE LOG

9 Years or 90,000 Miles

- | | |
|--|---|
| <ul style="list-style-type: none"> <input type="checkbox"/> Check for available software updates (OTAs) and update upon customer authorization <input type="checkbox"/> Replace engine oil and oil filter. Reference Owners Manual for recommended oil grade and viscosity¹ <input type="checkbox"/> Lubricate propeller shaft (within 24 hours of submerging), re-torque nuts and bolts <input type="checkbox"/> Replace cabin air filter <input type="checkbox"/> Replace brake fluid <input type="checkbox"/> Replace engine air filter <input type="checkbox"/> Replace Smart Key battery <input type="checkbox"/> Inspect the following: <ul style="list-style-type: none"> ___ Ball joints and dust covers ___ Body ___ Brake lines and hoses ___ Brake rotor thickness and runout ___ Drive belt ___ Drive shaft boots ___ Engine coolant/intercooler coolant (see page 70) ___ Exhaust pipes and mountings ___ Front differential oil ___ Fuel lines and connections, fuel tank band and fuel tank vapor vent system hoses | <ul style="list-style-type: none"> <input type="checkbox"/> Reset oil maintenance reminder if oil was changed <input type="checkbox"/> Reset scheduled maintenance reminder <input type="checkbox"/> Rotate tires <input type="checkbox"/> Tighten propeller shaft <input type="checkbox"/> Inspect brake pads and discs <input type="checkbox"/> Add fuel injector cleaner to fuel tank (Hawaii only) <input type="checkbox"/> Check installation of driver's floor mat <input type="checkbox"/> Road test vehicle |
|--|---|

If you drive primarily under any of these special operating conditions, perform these additional items:

Driving off-road, on dirt roads or on dusty roads:

- ☐ Replace transfer case oil
- ☐ Tighten nuts and bolts on chassis

Towing a trailer, using a car-top carrier or heavy vehicle loading:

- ☐ Replace front differential oil
- ☐ Replace rear differential oil
- ☐ Replace transfer case oil
- ☐ Tighten nuts and bolts on chassis

Date: _____ Mileage: _____

MAINTENANCE

¹Replace the engine oil and oil filter every 12 months or 10,000 miles, or when the oil maintenance reminder appears, whichever comes first.

SCHEDULED MAINTENANCE LOG

MAINTENANCE

9.5 Years or 95,000 Miles

- ☐ Check for available software updates (OTAs) and update upon customer authorization
- ☐ Inspect and adjust all fluid levels
- ☐ Reset scheduled maintenance reminder
- ☐ Rotate tires
- ☐ Inspect brake pads and discs
- ☐ Inspect wiper blades
- ☐ Add fuel injector cleaner to fuel tank (Hawaii only)
- ☐ Check installation of driver's floor mat
- ☐ Road test vehicle

Note: If recommended oil WAS NOT used at the last oil change, replace engine oil and oil filter. See page 44 for conditions that apply. Some conditions require additional maintenance. See below.

If you drive primarily under any of these special operating conditions, perform these additional items:

Driving off-road, on dirt roads or on dusty roads:

- ☐ Inspect ball joints and dust covers
- ☐ Inspect drive shaft boots
- ☐ Inspect engine air filter
- ☐ Inspect propeller shaft boots
- ☐ Inspect rack-and-pinion assembly
- ☐ Lubricate propeller shaft (within 24 hours of submerging), re-torque nuts and bolts
- ☐ Tighten nuts and bolts on chassis

Towing a trailer, using a car-top carrier or heavy vehicle loading:

- ☐ Lubricate propeller shaft (within 24 hours of submerging), re-torque nuts and bolts
- ☐ Tighten propeller shaft
- ☐ Tighten nuts and bolts on chassis

Driving on roads on which road salt has been applied:

- ☐ Lubricate propeller shaft (within 24 hours of submerging), re-torque nuts and bolts

Date: _____ Mileage: _____

10 Years or 100,000 Miles

- ☐ Check for available software updates (OTAs) and update upon customer authorization
- ☐ Replace engine oil and oil filter. Reference Owners Manual for recommended oil grade and viscosity¹
- ☐ Reset oil maintenance reminder if oil was changed
- ☐ Reset scheduled maintenance reminder
- ☐ Rotate tires
- ☐ Replace engine coolant/intercooler coolant (see page 70)
- ☐ Inspect brake pads and discs
- ☐ Inspect wiper blades
- ☐ Add fuel injector cleaner to fuel tank (Hawaii only)
- ☐ Check installation of driver's floor mat
- ☐ Road test vehicle

If you drive primarily under any of these special operating conditions, perform these additional items:

Driving off-road, on dirt roads or on dusty roads:

- ☐ Inspect ball joints and dust covers
- ☐ Inspect drive shaft boots
- ☐ Inspect engine air filter
- ☐ Inspect propeller shaft boots
- ☐ Inspect rack-and-pinion assembly
- ☐ Lubricate propeller shaft (within 24 hours of submerging), re-torque nuts and bolts
- ☐ Tighten nuts and bolts on chassis

Towing a trailer, using a car-top carrier or heavy vehicle loading:

- ☐ Lubricate propeller shaft (within 24 hours of submerging), re-torque nuts and bolts
- ☐ Tighten propeller shaft
- ☐ Tighten nuts and bolts on chassis

Driving on roads on which road salt has been applied:

- ☐ Lubricate propeller shaft (within 24 hours of submerging), re-torque nuts and bolts

Date: _____ Mileage: _____

¹Replace the engine oil and oil filter every 12 months or 10,000 miles, or when the oil maintenance reminder appears, whichever comes first.

10.5 Years or 105,000 Miles

- ☐ Check for available software updates (OTAs) and update upon customer authorization
- ☐ Inspect and adjust all fluid levels
- ☐ Lubricate propeller shaft (within 24 hours of submerging), re-torque nuts and bolts
- ☐ Replace Smart Key battery
- ☐ Reset scheduled maintenance reminder
- ☐ Rotate tires
- ☐ Tighten propeller shaft
- ☐ Inspect brake pads and discs
- ☐ Add fuel injector cleaner to fuel tank (Hawaii only)
- ☐ Check installation of driver's floor mat
- ☐ Road test vehicle
- ☐ Inspect the following:

<input type="checkbox"/> Ball joints and dust covers	<input type="checkbox"/> Front differential oil
<input type="checkbox"/> Body	<input type="checkbox"/> Propeller shaft boots
<input type="checkbox"/> Brake lines and hoses	<input type="checkbox"/> Rack-and-pinion assembly
<input type="checkbox"/> Drive belt	<input type="checkbox"/> Rear differential oil
<input type="checkbox"/> Drive shaft boots	<input type="checkbox"/> Wiper blades
<input type="checkbox"/> Exhaust pipes and mountings	

Note: If recommended oil WAS NOT used at the last oil change, replace engine oil and oil filter. See page 44 for conditions that apply. Some conditions require additional maintenance. See below.

If you drive primarily under any of these special operating conditions, perform these additional items:

Driving off-road, on dirt roads or on dusty roads:

- ☐ Inspect engine air filter
- ☐ Tighten nuts and bolts on chassis

Towing a trailer, using a car-top carrier or heavy vehicle loading:

- ☐ Replace front differential oil
- ☐ Replace rear differential oil
- ☐ Tighten nuts and bolts on chassis

Date: _____ Mileage: _____

SCHEDULED MAINTENANCE LOG

MAINTENANCE

11 Years or 110,000 Miles

- ☐ Check for available software updates (OTAs) and update upon customer authorization
- ☐ Replace engine oil and oil filter. Reference Owners Manual for recommended oil grade and viscosity¹
- ☐ Reset oil maintenance reminder if oil was changed
- ☐ Reset scheduled maintenance reminder
- ☐ Rotate tires
- ☐ Inspect brake pads and discs
- ☐ Inspect wiper blades
- ☐ Add fuel injector cleaner to fuel tank (Hawaii only)
- ☐ Check installation of driver's floor mat
- ☐ Road test vehicle

If you drive primarily under any of these special operating conditions, perform these additional items:

Driving off-road, on dirt roads or on dusty roads:

- ☐ Inspect ball joints and dust covers
- ☐ Inspect drive shaft boots
- ☐ Inspect engine air filter
- ☐ Inspect propeller shaft boots
- ☐ Inspect rack-and-pinion assembly
- ☐ Lubricate propeller shaft (within 24 hours of submerging), re-torque nuts and bolts
- ☐ Tighten nuts and bolts on chassis

Towing a trailer, using a car-top carrier or heavy vehicle loading:

- ☐ Lubricate propeller shaft (within 24 hours of submerging), re-torque nuts and bolts
- ☐ Tighten propeller shaft
- ☐ Tighten nuts and bolts on chassis

Driving on roads on which road salt has been applied:

- ☐ Lubricate propeller shaft (within 24 hours of submerging), re-torque nuts and bolts

Date: _____ Mileage: _____

11.5 Years or 115,000 Miles

- ☐ Check for available software updates (OTAs) and update upon customer authorization
- ☐ Inspect and adjust all fluid levels
- ☐ Inspect engine coolant /intercooler coolant (see page 70)
- ☐ Reset scheduled maintenance reminder
- ☐ Rotate tires
- ☐ Inspect brake pads and discs
- ☐ Inspect wiper blades
- ☐ Add fuel injector cleaner to fuel tank (Hawaii only)
- ☐ Check installation of driver's floor mat
- ☐ Road test vehicle

Note: If recommended oil WAS NOT used at the last oil change, replace engine oil and oil filter. See page 44 for conditions that apply. Some conditions require additional maintenance. See below.

If you drive primarily under any of these special operating conditions, perform these additional items:

Driving off-road, on dirt roads or on dusty roads:

- ☐ Inspect ball joints and dust covers
- ☐ Inspect drive shaft boots
- ☐ Inspect engine air filter
- ☐ Inspect propeller shaft boots
- ☐ Inspect rack-and-pinion assembly
- ☐ Lubricate propeller shaft (within 24 hours of submerging), re-torque nuts and bolts
- ☐ Tighten nuts and bolts on chassis

Towing a trailer, using a car-top carrier or heavy vehicle loading:

- ☐ Lubricate propeller shaft (within 24 hours of submerging), re-torque nuts and bolts
- ☐ Tighten propeller shaft
- ☐ Tighten nuts and bolts on chassis

Driving on roads on which road salt has been applied:

- ☐ Lubricate propeller shaft (within 24 hours of submerging), re-torque nuts and bolts

Date: _____ Mileage: _____

¹Replace the engine oil and oil filter every 12 months or 10,000 miles, or when the oil maintenance reminder appears, whichever comes first.

SCHEDULED MAINTENANCE LOG

12 Years or 120,000 Miles

- | | |
|--|---|
| <ul style="list-style-type: none"> <input type="checkbox"/> Check for available software updates (OTAs) and update upon customer authorization <input type="checkbox"/> Replace engine oil and oil filter. Reference Owners Manual for recommended oil grade and viscosity¹ <input type="checkbox"/> Lubricate propeller shaft (within 24 hours of submerging), re-torque nuts and bolts <input type="checkbox"/> Replace cabin air filter <input type="checkbox"/> Replace brake fluid <input type="checkbox"/> Replace engine air filter <input type="checkbox"/> Replace Smart Key battery <input type="checkbox"/> Replace spark plugs² <input type="checkbox"/> Reset oil maintenance reminder if oil was changed <input type="checkbox"/> Inspect the following: <ul style="list-style-type: none"> ___ Ball joints and dust covers ___ Body ___ Brake lines and hoses ___ Brake rotor thickness and runout ___ Drive belt ___ Drive shaft boots ___ Exhaust pipes and mountings ___ Front differential oil ___ Fuel lines and connections, fuel tank band and fuel tank vapor vent system hoses | <ul style="list-style-type: none"> <input type="checkbox"/> Reset scheduled maintenance reminder <input type="checkbox"/> Rotate tires <input type="checkbox"/> Tighten propeller shaft <input type="checkbox"/> Inspect brake pads and discs <input type="checkbox"/> Add fuel injector cleaner to fuel tank (Hawaii only) <input type="checkbox"/> Check installation of driver's floor mat <input type="checkbox"/> Road test vehicle <input type="checkbox"/> Replace vacuum pump vane and vane caps with new ones. Never reuse the replaced parts. |
|--|---|

If you drive primarily under any of these special operating conditions, perform these additional items:

Driving off-road, on dirt roads or on dusty roads:

- ☐ Replace transfer case oil
- ☐ Tighten nuts and bolts on chassis

Towing a trailer, using a car top carrier, heavy vehicle loading or extensive idling and/or low speed driving

- ☐ Replace front differential oil
- ☐ Replace rear differential oil
- ☐ Replace transfer case oil
- ☐ Replace transmission fluid
- ☐ Tighten nuts and bolts on chassis

Date: _____ Mileage: _____

¹Replace the engine oil and oil filter every 12 months or 10,000 miles, or when the oil maintenance reminder appears, whichever comes first.

²Required under the terms of the Emission Control Warranty.

SCHEDULED MAINTENANCE LOG

MAINTENANCE

12.5 Years or 125,000 Miles

- ☐ Check for available software updates (OTAs) and update upon customer authorization
- ☐ Inspect and adjust all fluid levels
- ☐ Reset scheduled maintenance reminder
- ☐ Rotate tires
- ☐ Inspect brake pads and discs
- ☐ Inspect wiper blades
- ☐ Add fuel injector cleaner to fuel tank (Hawaii only)
- ☐ Check installation of driver's floor mat
- ☐ Road test vehicle

Note: If recommended oil WAS NOT used at the last oil change, replace engine oil and oil filter. See page 44 for conditions that apply. Some conditions require additional maintenance. See below.

If you drive primarily under any of these special operating conditions, perform these additional items:

Driving off-road, on dirt roads or on dusty roads:

- ☐ Inspect ball joints and dust covers
- ☐ Inspect drive shaft boots
- ☐ Inspect engine air filter
- ☐ Inspect propeller shaft boots
- ☐ Inspect rack-and-pinion assembly
- ☐ Lubricate propeller shaft (within 24 hours of submerging), re-torque nuts and bolts
- ☐ Tighten nuts and bolts on chassis

Towing a trailer, using a car-top carrier or heavy vehicle loading:

- ☐ Lubricate propeller shaft (within 24 hours of submerging), re-torque nuts and bolts
- ☐ Tighten nuts and bolts on chassis
- ☐ Tighten propeller shaft

Driving on roads on which road salt has been applied:

- ☐ Lubricate propeller shaft (within 24 hours of submerging), re-torque nuts and bolts

Date: _____ Mileage: _____

13 Years or 130,000 Miles

- ☐ Check for available software updates (OTAs) and update upon customer authorization
- ☐ Replace engine oil and oil filter. Reference Owners Manual for recommended oil grade and viscosity¹
- ☐ Inspect engine coolant/intercooler coolant (see page 70)
- ☐ Reset oil maintenance reminder if oil was changed
- ☐ Reset scheduled maintenance reminder
- ☐ Rotate tires
- ☐ Inspect brake pads and discs
- ☐ Inspect wiper blades
- ☐ Add fuel injector cleaner to fuel tank (Hawaii only)
- ☐ Check installation of driver's floor mat
- ☐ Road test vehicle

If you drive primarily under any of these special operating conditions, perform these additional items:

Driving off-road, on dirt roads or on dusty roads:

- ☐ Inspect ball joints and dust covers
- ☐ Inspect drive shaft boots
- ☐ Inspect engine air filter
- ☐ Inspect propeller shaft boots
- ☐ Inspect rack-and-pinion assembly
- ☐ Lubricate propeller shaft (within 24 hours of submerging), re-torque nuts and bolts
- ☐ Tighten nuts and bolts on chassis

Towing a trailer, using a car-top carrier or heavy vehicle loading:

- ☐ Lubricate propeller shaft (within 24 hours of submerging), re-torque nuts and bolts
- ☐ Tighten propeller shaft
- ☐ Tighten nuts and bolts on chassis

Driving on roads on which road salt has been applied:

- ☐ Lubricate propeller shaft (within 24 hours of submerging), re-torque nuts and bolts

Date: _____ Mileage: _____

¹Replace the engine oil and oil filter every 12 months or 10,000 miles, or when the oil maintenance reminder appears, whichever comes first.

13.5 Years or 135,000 Miles

- ☐ Check for available software updates (OTAs) and update upon customer authorization
- ☐ Inspect and adjust all fluid levels
- ☐ Lubricate propeller shaft (within 24 hours of submerging), re-torque nuts and bolts
- ☐ Replace Smart Key battery
- ☐ Reset scheduled maintenance reminder
- ☐ Rotate tires
- ☐ Tighten propeller shaft
- ☐ Inspect brake pads and discs
- ☐ Add fuel injector cleaner to fuel tank (Hawaii only)
- ☐ Check installation of driver's floor mat
- ☐ Road test vehicle
- ☐ Inspect the following:

<input type="checkbox"/> Ball joints and dust covers	<input type="checkbox"/> Front differential oil
<input type="checkbox"/> Body	<input type="checkbox"/> Propeller shaft boots
<input type="checkbox"/> Brake lines and hoses	<input type="checkbox"/> Rack-and-pinion assembly
<input type="checkbox"/> Drive belt	<input type="checkbox"/> Rear differential oil
<input type="checkbox"/> Drive shaft boots	<input type="checkbox"/> Wiper blades
<input type="checkbox"/> Exhaust pipes and mountings	

Note: If recommended oil WAS NOT used at the last oil change, replace engine oil and oil filter. See page 44 for conditions that apply. Some conditions require additional maintenance. See below.

If you drive primarily under any of these special operating conditions, perform these additional items:

Driving off-road, on dirt roads or on dusty roads:

- ☐ Inspect engine air filter
- ☐ Tighten nuts and bolts on chassis

Towing a trailer, using a car-top carrier or heavy vehicle loading:

- ☐ Replace front differential oil
- ☐ Replace rear differential oil
- ☐ Tighten nuts and bolts on chassis

Date: _____ Mileage: _____

SCHEDULED MAINTENANCE LOG

MAINTENANCE

14 Years or 140,000 Miles

- ☐ Check for available software updates (OTAs) and update upon customer authorization
- ☐ Replace engine oil and oil filter. Reference Owners Manual for recommended oil grade and viscosity¹
- ☐ Reset oil maintenance reminder if oil was changed
- ☐ Reset scheduled maintenance reminder
- ☐ Rotate tires
- ☐ Inspect brake pads and discs
- ☐ Inspect wiper blades
- ☐ Add fuel injector cleaner to fuel tank (Hawaii only)
- ☐ Check installation of driver's floor mat
- ☐ Road test vehicle

If you drive primarily under any of these special operating conditions, perform these additional items:

Driving off-road, on dirt roads or on dusty roads:

- ☐ Inspect ball joints and dust covers
- ☐ Inspect drive shaft boots
- ☐ Inspect engine air filter
- ☐ Inspect propeller shaft boots
- ☐ Inspect rack-and-pinion assembly
- ☐ Lubricate propeller shaft (within 24 hours of submerging), re-torque nuts and bolts
- ☐ Tighten nuts and bolts on chassis

Towing a trailer, using a car-top carrier or heavy vehicle loading:

- ☐ Lubricate propeller shaft (within 24 hours of submerging), re-torque nuts and bolts
- ☐ Tighten propeller shaft
- ☐ Tighten nuts and bolts on chassis

Driving on roads on which road salt has been applied:

- ☐ Lubricate propeller shaft (within 24 hours of submerging), re-torque nuts and bolts

Date: _____ Mileage: _____

14.5 Years or 145,000 Miles

- ☐ Check for available software updates (OTAs) and update upon customer authorization
- ☐ Inspect and adjust all fluid levels
- ☐ Inspect engine coolant/intercooler coolant (see page 70)
- ☐ Reset scheduled maintenance reminder
- ☐ Rotate tires
- ☐ Inspect brake pads and discs
- ☐ Inspect wiper blades
- ☐ Add fuel injector cleaner to fuel tank (Hawaii only)
- ☐ Check installation of driver's floor mat
- ☐ Road test vehicle

Note: If recommended oil WAS NOT used at the last oil change, replace engine oil and oil filter. See page 44 for conditions that apply. Some conditions require additional maintenance. See below.

If you drive primarily under any of these special operating conditions, perform these additional items:

Driving off-road, on dirt roads or on dusty roads:

- ☐ Inspect ball joints and dust covers
- ☐ Inspect drive shaft boots
- ☐ Inspect engine air filter
- ☐ Inspect propeller shaft boots
- ☐ Inspect rack-and-pinion assembly
- ☐ Lubricate propeller shaft (within 24 hours of submerging), re-torque nuts and bolts
- ☐ Tighten nuts and bolts on chassis

Towing a trailer, using a car-top carrier or heavy vehicle loading:

- ☐ Lubricate propeller shaft (within 24 hours of submerging), re-torque nuts and bolts
- ☐ Tighten propeller shaft
- ☐ Tighten nuts and bolts on chassis

Driving on roads on which road salt has been applied:

- ☐ Lubricate propeller shaft (within 24 hours of submerging), re-torque nuts and bolts

Date: _____ Mileage: _____

¹Replace the engine oil and oil filter every 12 months or 10,000 miles, or when the oil maintenance reminder appears, whichever comes first.

SCHEDULED MAINTENANCE LOG

15 Years or 150,000 Miles

- | | |
|---|--|
| <ul style="list-style-type: none"> <input type="checkbox"/> Check for available software updates (OTAs) and update upon customer authorization <input type="checkbox"/> Replace engine oil and oil filter. Reference Owners Manual for recommended oil grade and viscosity¹ <input type="checkbox"/> Lubricate propeller shaft (within 24 hours of submerging), re-torque nuts and bolts <input type="checkbox"/> Replace cabin air filter <input type="checkbox"/> Replace brake fluid <input type="checkbox"/> Replace engine air filter <input type="checkbox"/> Replace engine coolant/intercooler coolant (see page 70) <input type="checkbox"/> Inspect the following: <ul style="list-style-type: none"> ___ Ball joints ___ Brake lines and hoses ___ Brake rotor thickness and runout ___ Drive belt ___ Drive shaft boots ___ Exhaust pipes and mountings ___ Front differential oil ___ Fuel lines and connections, fuel tank band and fuel tank vapor vent system hoses | <ul style="list-style-type: none"> <input type="checkbox"/> Replace Smart Key battery <input type="checkbox"/> Reset oil maintenance reminder if oil was changed <input type="checkbox"/> Reset scheduled maintenance reminder <input type="checkbox"/> Rotate tires <input type="checkbox"/> Tighten propeller shaft <input type="checkbox"/> Inspect brake pads and discs <input type="checkbox"/> Add fuel injector cleaner to fuel tank (Hawaii only) <input type="checkbox"/> Check installation of driver's floor mat <input type="checkbox"/> Road test vehicle ___ Fuel tank cap gasket ___ Propeller shaft boots ___ Rack-and-pinion assembly ___ Rear differential oil ___ Transfer case oil level ___ Transmission fluid cooler hoses and connections ___ Transmission for signs of leakage ___ Wiper blades |
|---|--|

If you drive primarily under any of these special operating conditions, perform these additional items:

Driving off-road, on dirt roads or on dusty roads:

- ☐ Replace transfer case oil
- ☐ Tighten nuts and bolts on chassis

Towing a trailer, using a car-top carrier or heavy vehicle loading:

- ☐ Replace front differential oil
- ☐ Replace rear differential oil
- ☐ Replace transfer case oil
- ☐ Tighten nuts and bolts on chassis

Date: _____ Mileage: _____

MAINTENANCE

¹Replace the engine oil and oil filter every 12 months or 10,000 miles, or when the oil maintenance reminder appears, whichever comes first.